


PUSH END INTO
SIDE OF CAR

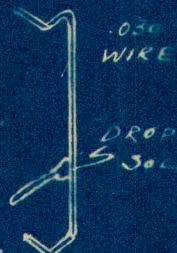


DOOR LATCH

BRADS - DRIVEN IN
HEAD CUT OFF
HAMMERED UP



1/16" SQUARE WOOD CUT FOR
RUNBOARD SUPPORTS

DOOR HINGES FASTENED
WITH BANK PINS

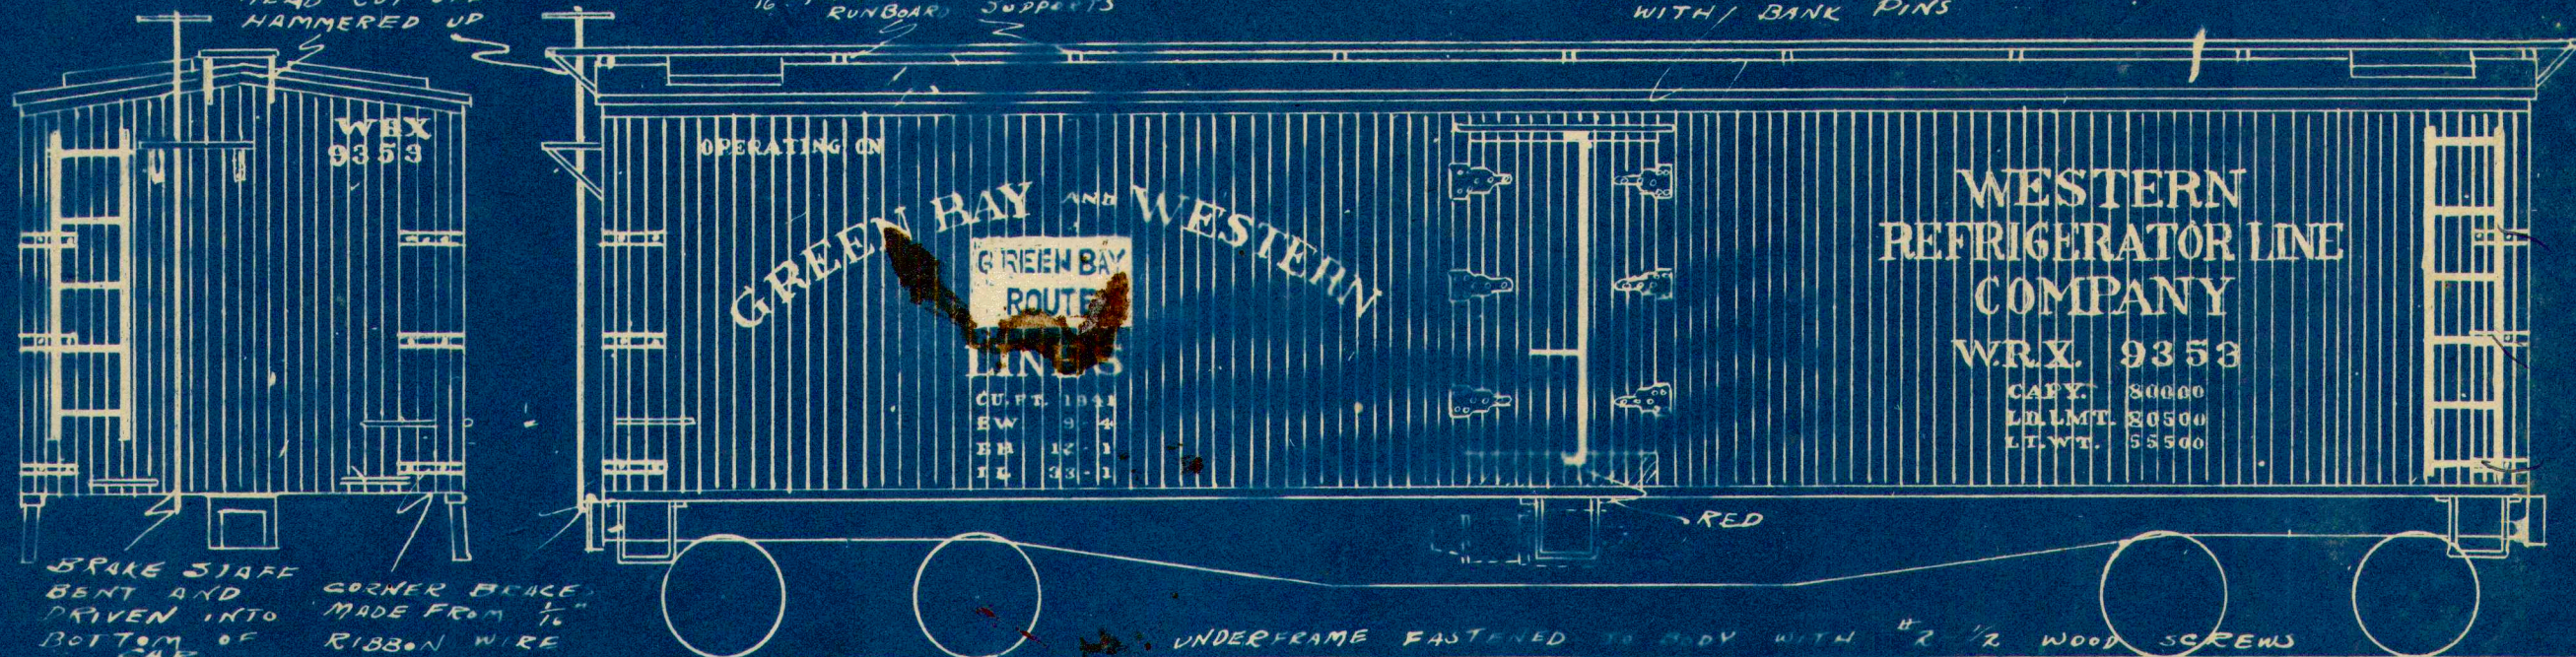

BRAKE STAFF
BENT AND
DRIVEN INTO
BOTTOM OF
CAR.

CORNER BRACES
MADE FROM 1/16"
RIBBON WIRE

DRILLED #67
- FASTENED TO
CAR BODY WITH
BANK PINS

UNDERFRAME FASTENED TO BODY WITH #2 1/2 WOOD SCREWS

COLORS

ROOF - ENDS - UNDERBODY
AND TRUCKS - RED.

SIDES - GRAY OR ALUMINUM
RECTANGLE UNDER "GREEN BAY
APPLE GREEN.

HINGES - DOOR LOCK AND SIDE

LADDERS - BLACK

LIST OF MATERIALS

- | | |
|---|---|
| <input checked="" type="checkbox"/> CAR BODY WOOD | <input checked="" type="checkbox"/> BRAKE WHEEL |
| <input checked="" type="checkbox"/> UNDERFRAME | <input checked="" type="checkbox"/> BRAKE PLATFORM |
| <input checked="" type="checkbox"/> TRUCKS | <input checked="" type="checkbox"/> BRAKE CYLINDER |
| <input checked="" type="checkbox"/> COUPLERS | <input checked="" type="checkbox"/> STIRRUP STEPS |
| <input checked="" type="checkbox"/> LADDERS - DRILLED | <input checked="" type="checkbox"/> WIRE FOR GRAB IRONS |
| <input checked="" type="checkbox"/> ICE HATCHES | <input checked="" type="checkbox"/> SCREWS 3-1/2" #2 |
| <input checked="" type="checkbox"/> 1/16" RIBBON WIRE | <input checked="" type="checkbox"/> HINGES |
| <input checked="" type="checkbox"/> GRAY + RED PAINT | <input checked="" type="checkbox"/> TRANSFERS |

SCALE MODEL
RAILWAYS