


"DREADNOUGHT" ENDS.
 TRIM WITH FILE
 DRILL & NAIL TO END OF
 CAR WITH $\frac{1}{2}$ " BANK PINS OR
 ESCUTCHEON PINS



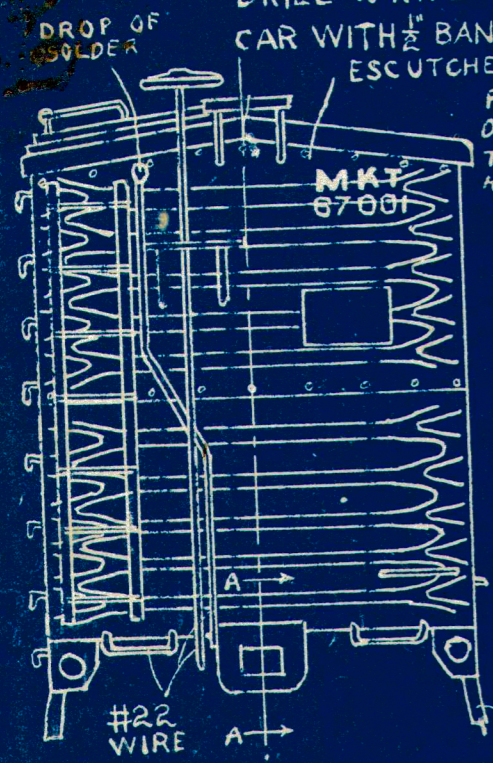


FASTEN ALL PARTS
 ON END BY NAILING
 THROUGH DRILLED
 HOLES INTO WOOD
 BENEATH

NOTE:
 SERIES NUMBERS
 67001 TO
 67500

STRIP OF
 TIN-CAN METAL
 CUT & BENT TO SHAPE

FOR SHEATHING USE A BLUNT SCRIBER

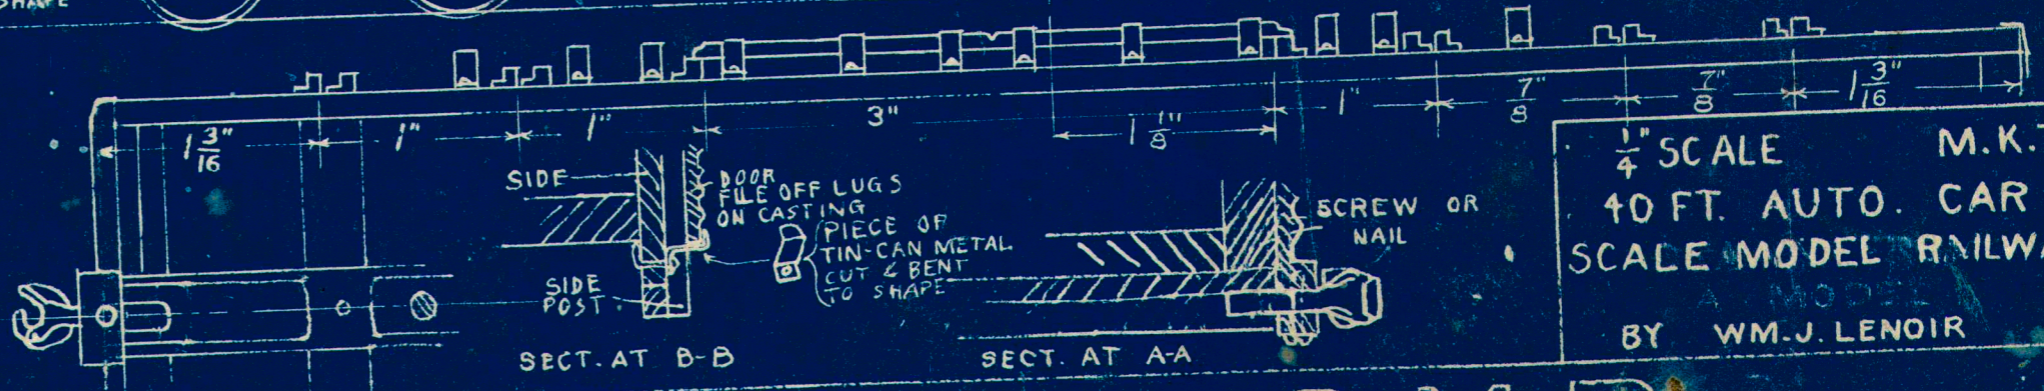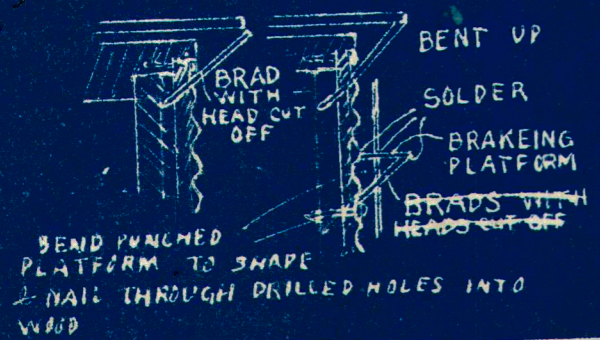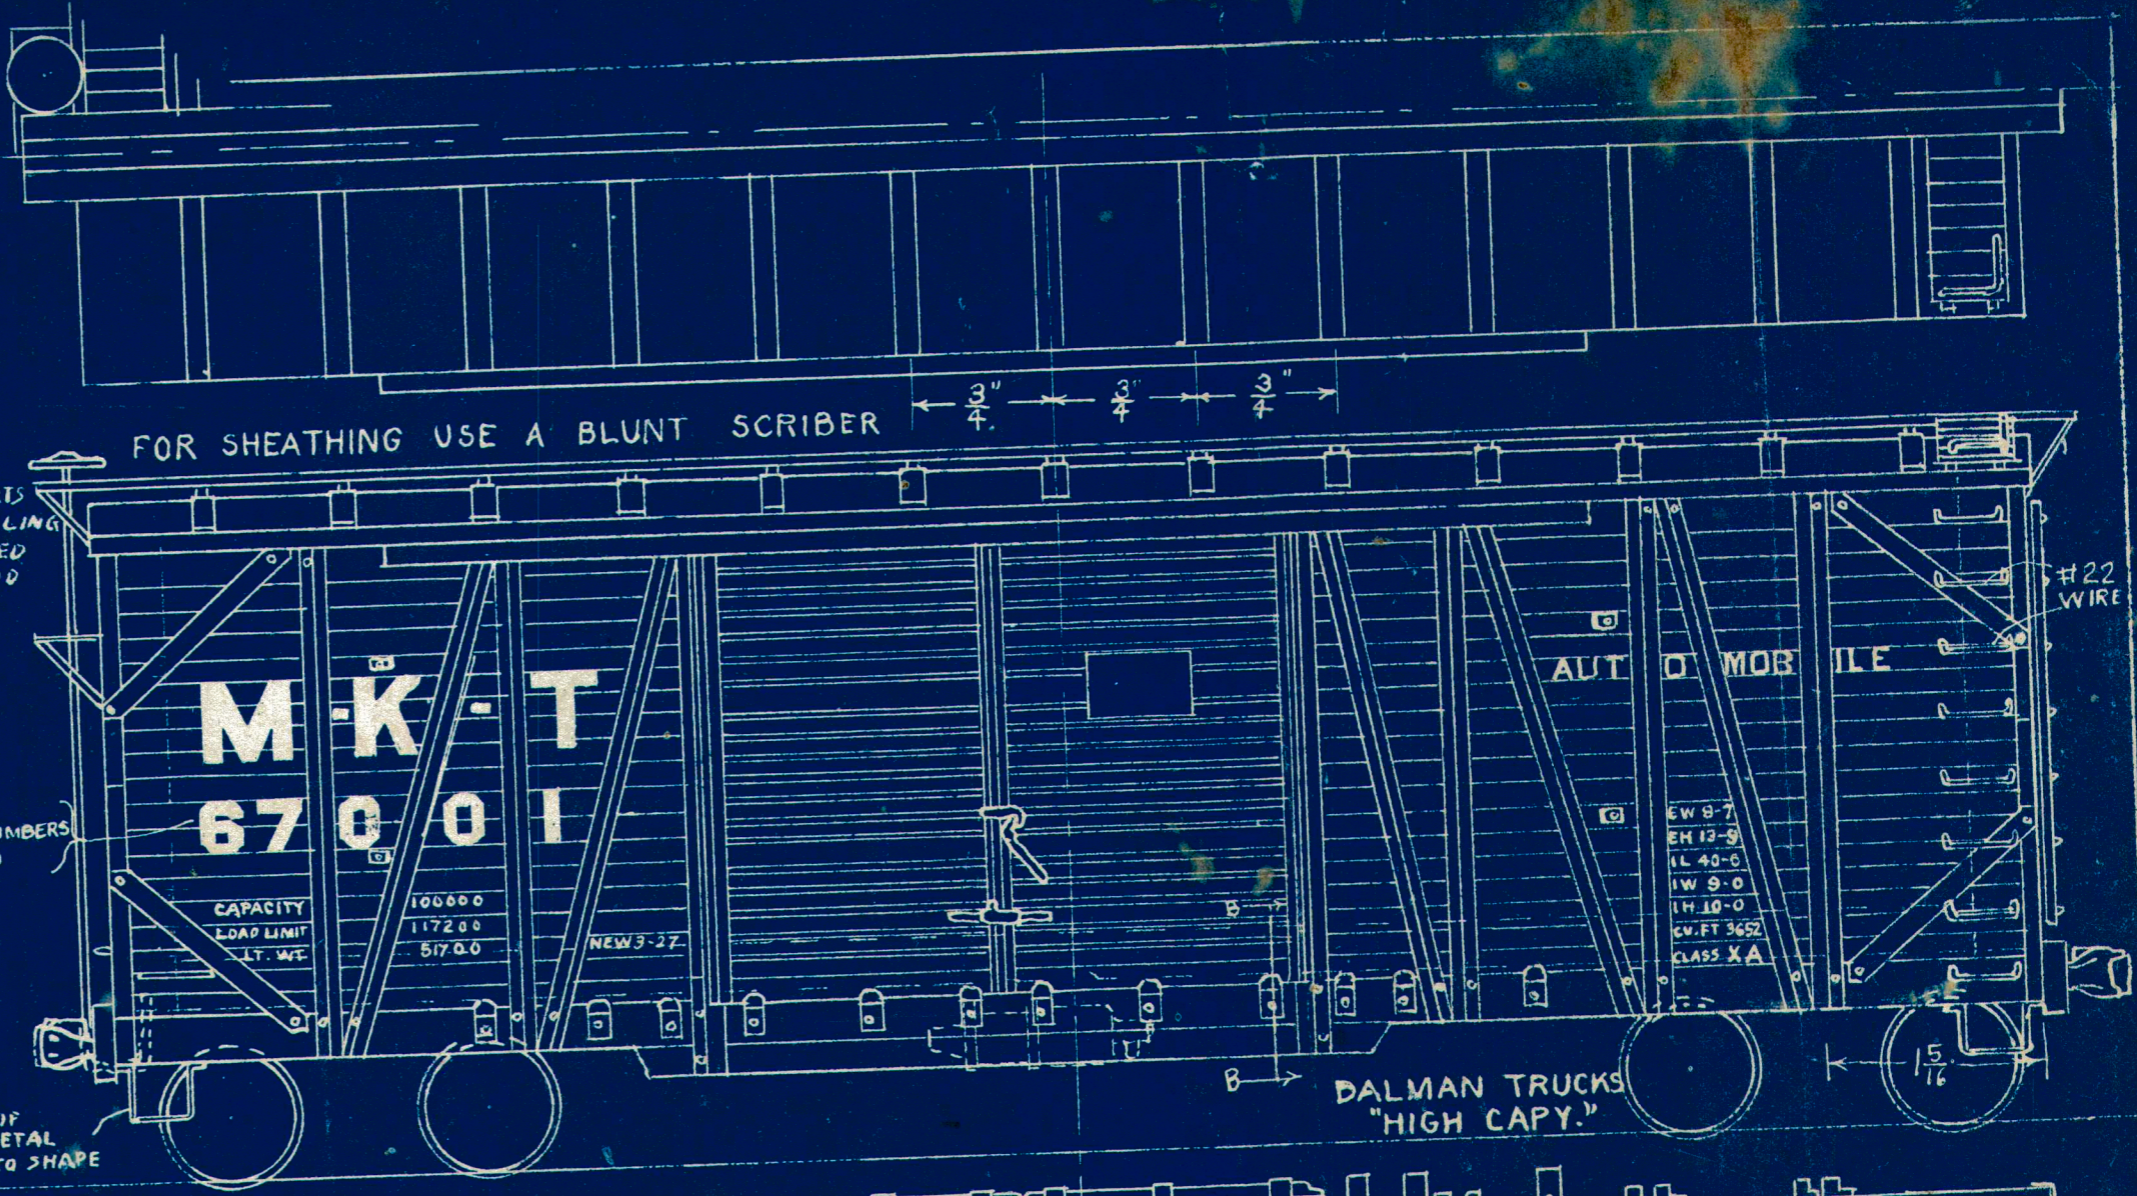

$\frac{1}{4}$ " SCALE M.K.T.
 40 FT. AUTO. CAR
 SCALE MODEL RAILWAYS
 BY WM. J. LENOIR

SMR