


FILE CUPOLA CASTINGS TO FIT TOGETHER AND CONTOUR OF ROOF. SOLDER TOGETHER BEING CAREFULL TO KEEP SQUARE. SOLDER BRADS IN CORNERS. SOLDER $1\frac{1}{2}$ " X 2" ROOF IN PLACE, & CLEAN OFF ALL EXCESS SOLDER & PUSH THE CUPOLA INTO ROOF.

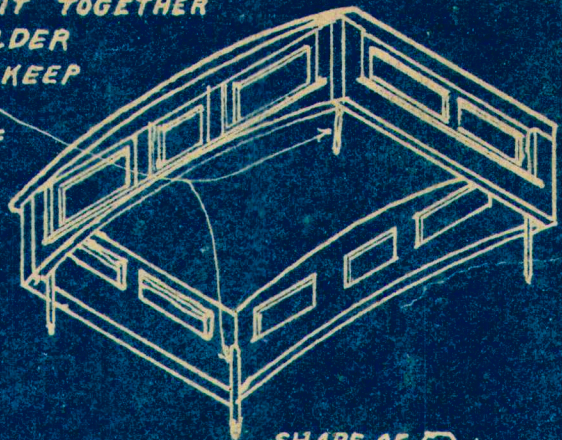

DRILL #67 HOLES IN ROOF FOR SAFTYRAILS, BEND TO SHAPE & SOLDER IN PLACE

WHITTLE BRACES FROM WOOD TO FIT.

SHAPE OF HOOD

SOLDER LADDER TO BRADS DRIVEN IN ROOF HERE.

DRILL #67 IN END SILL FOR RAILING POST. BEND RAILINGS TO SHAPE & SOLDER IN PLACE

DRILL #49 & TAP 2-56 $\frac{1}{8}$ " IN. (BUT DO NOT DRILL THROUGH TO TOP) FOR COUPLER PIVOT.

DRILL #67 & INSERT GRABIRMS $\frac{3}{16}$ " $\frac{3}{16}$ "

FOLD TRIM POLING POCKETS WITH TIN SHEARS & DRILL #67 FOR PINS

BRAKE HOSE BENT FROM $\frac{1}{16}$ " DIA. WIRE & SOLDERED TO UNDERFRAME. FLATTEN END WITH HAMMER.

CUT WINDOW OPENINGS IN SIDES & CEMENT CELULOID & SASH IN PLACE

CELULOID

CARDBOARD SASH (CUT OUT WITH KNIFE OR RAZOR BLADE)

ROUND ROOF WITH PLANE & SAND PAPER. CUT OUT UNDER PORTION WITH KNIFE OR CHISEL.


BEADING AROUND OUTSIDE WINDOWS.

DRILL HOLE & CEMENT STOVE PIPE IN PLACE

BOTTOM PIECE

SWING ACTION CABOOSE TRACKS

CURVE DOOR IN END BEFORE ASSEMBLING

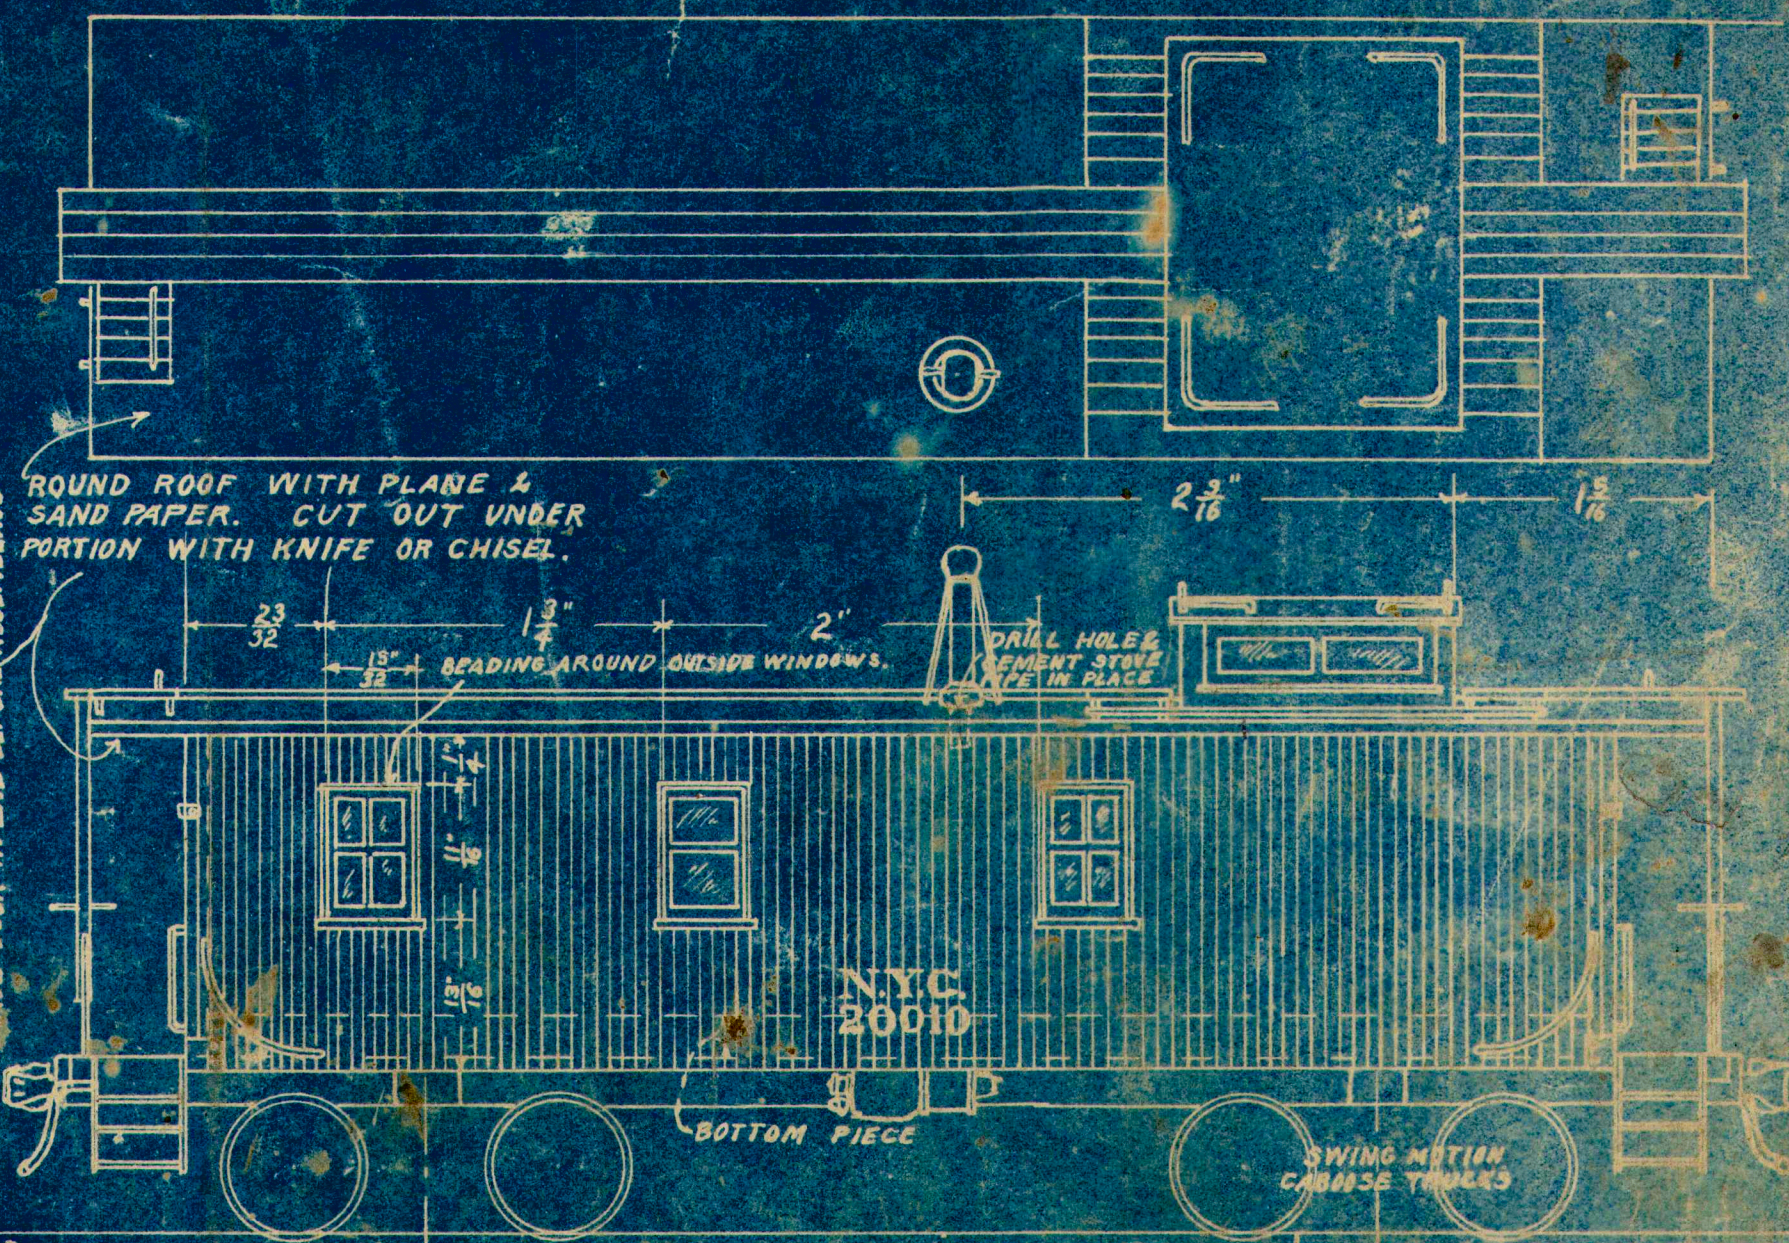

N.Y.C. CABOOSE
SCALE MODEL
RAILWAYS

COLOR: FREIGHT CAR BROWN

DRN BY 7/12