


THE ALL-NATION LINE

Draft Gear # 3006

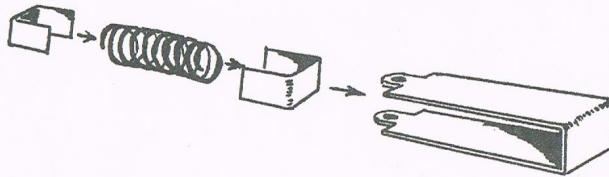

INSTRUCTIONS

Place 'C' channel into yoke and then add spring and other 'C' channel. Be sure that the 'C' channels face out on the side of the yoke. Now place the unit into housing. The best method is; put the front of the yoke with hole in first, then push forward and drop the back down into housing. Now add plate spring, cover and pin to floor.

