


9128
Monitor Roof

Round roofs as shown

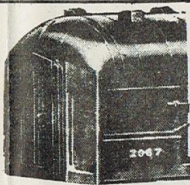

9129
Arch Roof

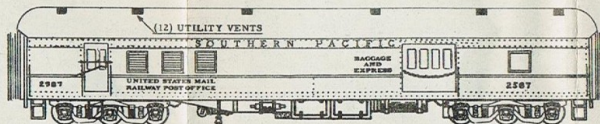





Illustration above shows the location of Utility Vents on the 9129 Arch Roof model. The small window in the baggage compartment is featured in some cars.

9128 9129



O GAUGE
70' P-B COMBINE

W.M.K. WALTHERS INC.
1246 N. WATER STREET
MILWAUKEE 2, WISCONSIN

Scale - 1/8" = one foot
60-0317

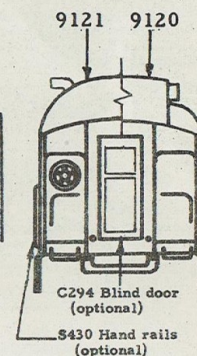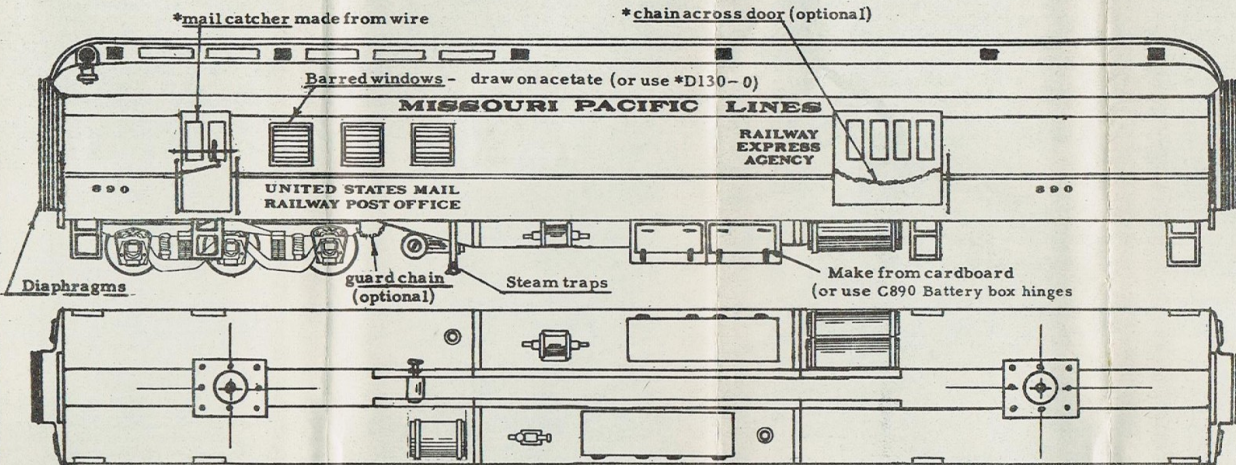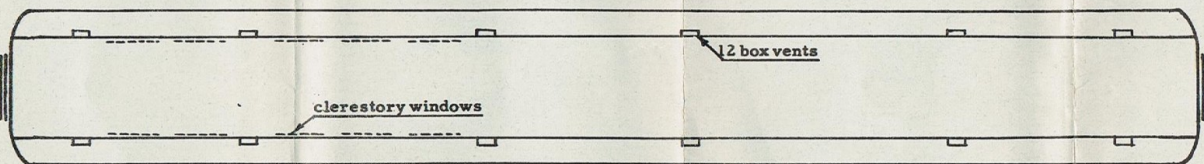

Underframe Assembly Detail



IMPORTANT -- TRUCKS & COUPLERS
Truck centers shows average. Verify position with the trucks you intend to use before cutting centersill. (Allow for steps).
Mount couplers on a pad of 3/32" centersill stock. Proper coupler height (center) is

HEY, HERE'S SOMETHING NEW!


One of the really new features of this kit is the method of cementing the sides to the body. BUT, you need a cement that will hold wood to metal: one that will NOT come loose in a damp basement, a cement that will NOT crack even if the model is stored in an attic where the temperature may change rapidly from sub-zero to plus 120°. **GOO WILL DO THIS JOB.**



We have tested Goo continuously since 1949 and we KNOW it will do this job (and most any other cementing job). Don't take a chance with an ordinary cement. Your models deserve Goo. Try it. Give Goo a chance to show you some new tricks.


FOLLOW DIRECTIONS. It is important and to your advantage to coat both surfaces with Goo and let dry for 2-3 minutes as it says on the tube. Or, if you prefer, you may use the **TRANSFER METHOD.** Coat one part with Goo, press into place and remove. Goo has now "transferred" to the other surface. WAIT 2-3 minutes while the excess solvent evaporates and tack builds up, then press into place for final assembly. You'll be amazed at the difference this simple procedure makes in the speed with which your joints set and the ease with which your models Goo together.

Sides, floor, and roof are all cut to exact size. You do not have to trim them. Roof is 1/2" longer than sides and floor.



ASSEMBLY OUTLINE

- A** Clean flash from end castings. Fasten optional super detail parts to ends if desired. (See note on "Super Details".)
- B** Fasten ends to floor and roof with screws and Goo (inset "B"). Follow directions on Goo tube for quickest bond.
- C** Notch floor to provide clearance for strap steps at the end of the car. ("F").
- D** Locate truck centers for the trucks you will use and Goo the diecast body bolsters in place. Cut centersill parts from wood and assemble on floor, reinforcing the fishbelly.

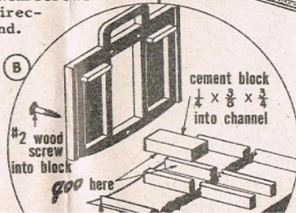


SUPER DETAILS




In order to keep the price of the basic kit as low as possible, we have packed the super detailing parts (usually referred to as "optional" on the plans) in a separate kit. These kits, which include hand rails, grab irons, prism windows, guard chain for the trucks, hinges and handles for underbody boxes are available for all styles of cars. You may also purchase accessories such as air conditioning strips, marker lights, venetian blind decals, interior detailing, and lighting kits that will make your car a real show-piece. Consult catalog for listings.

REMOVABLE ROOF


A removable roof is desirable if interior detailing or lighting is planned. To provide for it, cut away the regular side support rails and make a new support frame as shown. Sides will be Gooed to this new frame.

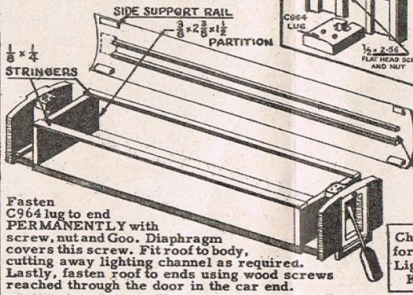

Fasten C964 lug to end PERMANENTLY with screw, nut and Goo. Diaphragm covers this screw. Fit roof to body, cutting away lighting channel as required. Lastly, fasten roof to ends using wood screws reached through the door in the car end.

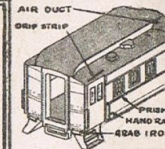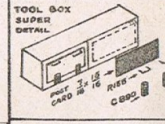

E Complete the underbody details with both standard and optional superdetail parts, scaling any needed dimensions from the plan. See "F" for mounting strap steps.

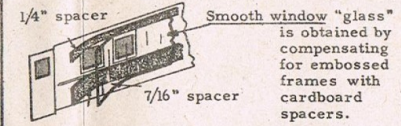


F Prepare the sides, mounting all desired details and fastening side doors in place. (Doors can be made to slide using R157 door slides.) Doors must be trimmed to fit in space provided. Check the sides against the body for fit and CUT AWAY roof and floor for clearance as required. Now mount strap steps in floor as shown. (Alt. method: solder steps to car side). Paint the sides, then install window material.

G Prepare roof, installing details with Goo as shown on the plans and rounding the ends with file and sandpaper to contour shown in the drawings.

H Paint the body, except do not paint the edges of the floor and roof where the sides will be cemented in place.

I Fasten sides to body with Goo as follows: Coat the edge of the floor and roof with Goo and press the sides in place. Remove the sides and allow the Goo, which is now on the sides as well as the floor and roof, to dry for two minutes. Then press the sides firmly in place. The joint will set very quickly this way.

J Mount trucks and couplers.

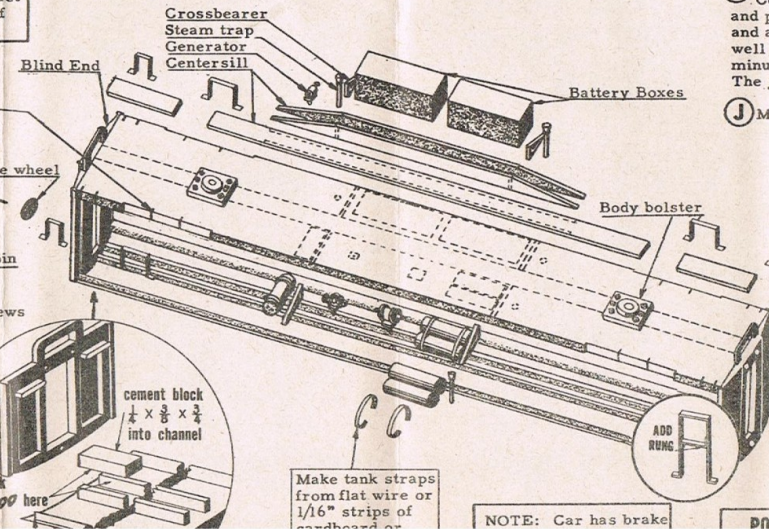

Mount trucks with #4 x 3/4" Round head wood screws

Sides snap inside the lip on the ends.

Mount couplers with #2 x 3/8 round head wood screws

Fasten ends to roof and floor with #2 x 1/2" Flat Head Wood Screws. (See inset "B")

IMPORTANT: These General Instructions show the body assembly of any car of this type. Car plans on the reverse will show where to locate all detail parts.

NOTE: Car has brake

PORTAL BARBERS DINING CAR