

9113

64-0124

**PULLMAN**  
**BAGGAGE-CLUB**


"0" SCALE

WM. K. WALTERS, INC.  
MILWAUKEE 2, WISCONSIN


Scale 1/8" = 1'

\* = Super detail parts or optional accessories

BAGGAGE CLUB Car. 191 of these cars were built, with a number of them in the City, Liberty, and Capitol name series. Interior equipment included a Buffet, Shower, Barber, and a lounge area fitted with parlor-car type chairs.

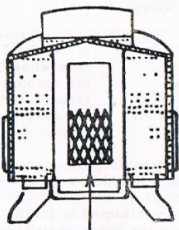


tailgate optional

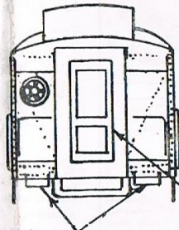


\* S120 Grab irons

\* C294 Blind door (optional)

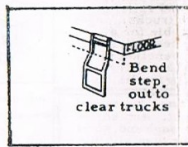

Bend step out to clear trucks

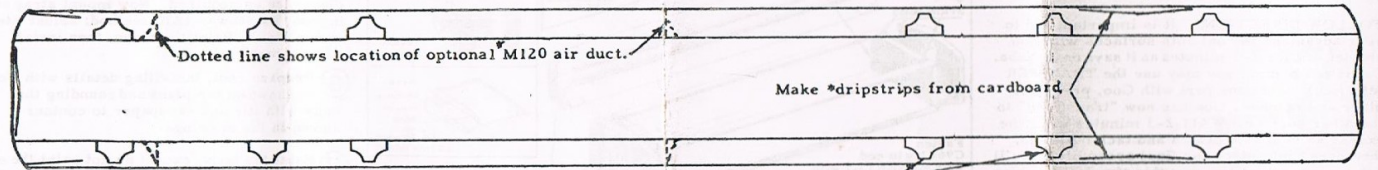


Dotted line shows location of optional M120 air duct.

Make \*dripstrips from cardboard.

C667 Pullman Vents

\* C979 Bead continuation castings

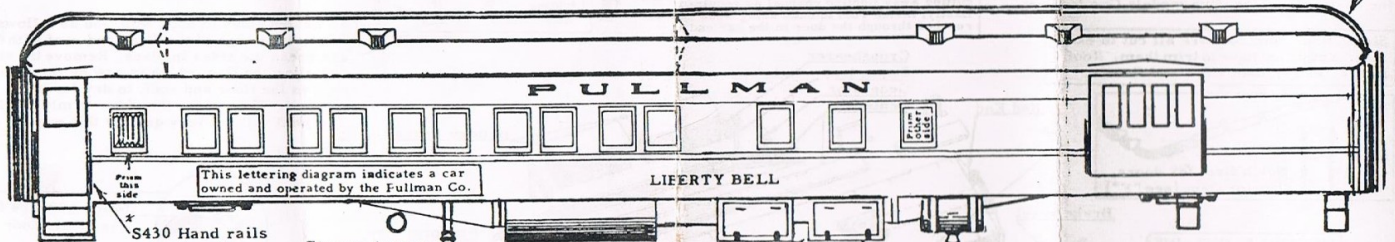


This lettering diagram indicates a car owned and operated by the Pullman Co.

\* S430 Hand rails (optional)



Steam traps

Make from cardboard or use C890 Battery Box hinges and R155 Handles.

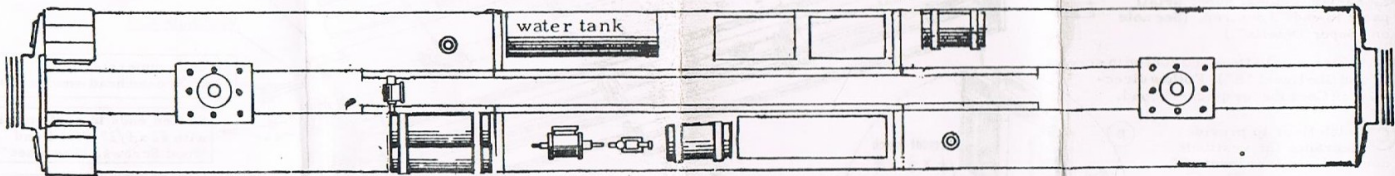

water tank

**Underframe Assembly Detail**



Cut two

**IMPORTANT**

Truck centers shown are average. Verify position with trucks to be used (allow for steps) before cutting centersill parts.

Mount couplers on a pad of 3/32" centersill stock. Proper coupler height (center) is 11/16" above rail or 1/4" below floor.



**HEY, HERE'S SOMETHING NEW:**


One of the really new features of this kit is the method of cementing the sides to the body. BUT, you need a cement that will hold wood to metal: one that will NOT come loose in a damp basement, a cement that will NOT crack even if the model is stored in an attic where the temperature may change rapidly from sub-zero to plus 120°. **GOO WILL DO THIS JOB.**



We have tested Goo continuously since 1949 and we KNOW it will do this job (and most any other cementing job). Don't take a chance with an ordinary cement. Your models deserve Goo. Try it. Give Goo a chance to show you some new tricks.

**FOLLOW DIRECTIONS.** It is important and to your advantage to coat both surfaces with Goo and let dry for 2-3 minutes as it says on the tube. Or, if you prefer, you may use the **TRANSFER METHOD.** Coat one part with Goo, press into place and remove. Goo has now "transferred" to the other surface. **WAIT 2-3 minutes** while the excess solvent evaporates and tack builds up, then press into place for final assembly. You'll be amazed at the difference this simple procedure makes in the speed with which your joints set and the ease with which your models Goo together.

Sides, floor, and roof are all cut to exact size. You do not have to trim them. Roof is 1/2" longer than sides and floor.




**ASSEMBLY OUTLINE**

**A** Clean flash from end castings. Fasten optional super detail parts to ends if desired. (See note on "Super Details".)

**B** Fasten ends to floor and roof with screws and Goo (inset "B"). Follow directions on Goo tube for quickest bond.

**C** Notch floor to provide clearance for vestibule door and step (see inset "C").

**D** Locate truck centers for the trucks you will use and Goo the diecast body bolsters in place. Cut centersill parts from wood and assemble on floor, reinforcing the fishbelly sections with pins. Be sure the centersill is centered on the floor.

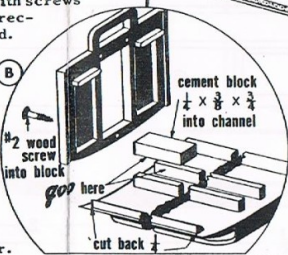


**SUPER DETAILS**

In order to keep the price of the basic kit as low as possible, we have packed the super detailing parts (usually referred to as "optional" on the plans) in a separate kit. These kits, which include hand rails, grab irons, prism windows, guard chain for the trucks, hinges and handles for underbody boxes are available for all styles of cars. You may also purchase accessories such as air conditioning strips, marker lights, venetian blind decals, interior detailing, and lighting kits that will make your car a real show-piece. Consult catalog for listings.

**REMOVABLE ROOF**

A removable roof is desirable if interior detailing or lighting is planned. To provide for it, cut away the regular side support rails and make a new support frame as shown. Sides will be Gooed to this new frame.


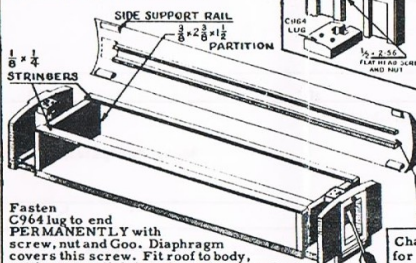


Fasten C964 lug to end **PERMANENTLY** with screw, nut and Goo. Diaphragm covers this screw. Fit roof to body, cutting away lighting channel as required. Lastly, fasten roof to ends using wood screws reached through the door in the car end.


**TOOL BOX SUPER DETAIL**



**AIR DUCT DRIP STRIP**



**E** Complete the underbody details with both standard and optional superdetail parts, scaling any needed dimensions from the plan. See "F" for mounting strap steps.

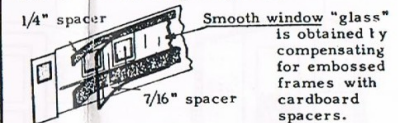



**F** Prepare the sides, mounting all desired details and fastening side doors in place. (Doors can be made to slide using R157 door slides.) Doors must be trimmed to fit in space provided. Check the sides against the body for fit and CUT AWAY roof and floor for clearance as required. Now mount strap steps in floor as shown. (Alt. method: solder steps to car side). Paint the sides, then install window material.

**G** Prepare roof, installing details with Goo as shown on the plans and rounding the ends with file and sandpaper to contour shown in the drawings.

**H** Paint the body, except do not paint the edges of the floor and roof where the sides will be cemented in place.

**I** Fasten sides to body with Goo as follows: Coat the edge of the floor and roof with Goo and press the sides in place. Remove the sides and allow the Goo, which is now on the sides as well as the floor and roof, to dry for two minutes. Then press the sides firmly in place. The joint will set very quickly this way.

**J** Mount trucks and couplers.

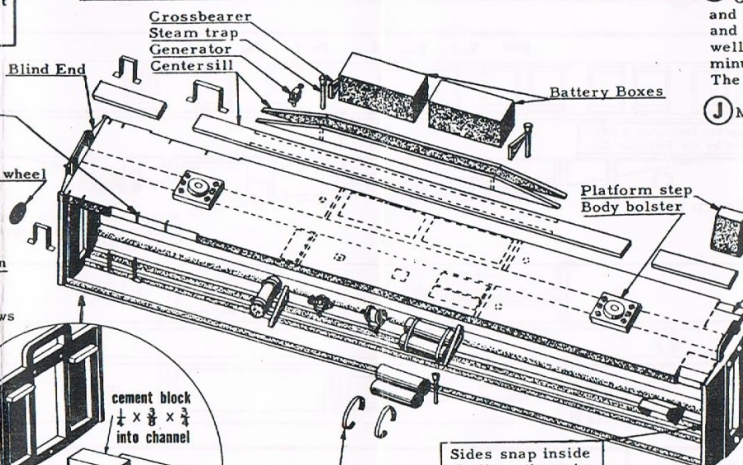

Mount couplers with #2 x 3/8 round head wood screws

Fasten ends to roof and floor with #2 x 1/2" Flat Head Wood Screws. (See inset "B")

**IMPORTANT:** These General Instructions show the body assembly of any car of this type. Car plans on the reverse will show where to locate all detail parts.

Sides snap inside the lip on the ends.

Mount trucks with #4 x 3/4" Round head wood screws

Make tank straps from flat wire or 1/16" strips of cardboard or sticky tape.

**COMBINATION CARS O GA**

Wm K WALTHERS, Inc. 59-0127