


WIRING DIAGRAM FOR ALL-NATION'S TINPLATE LOCOMOTIVES

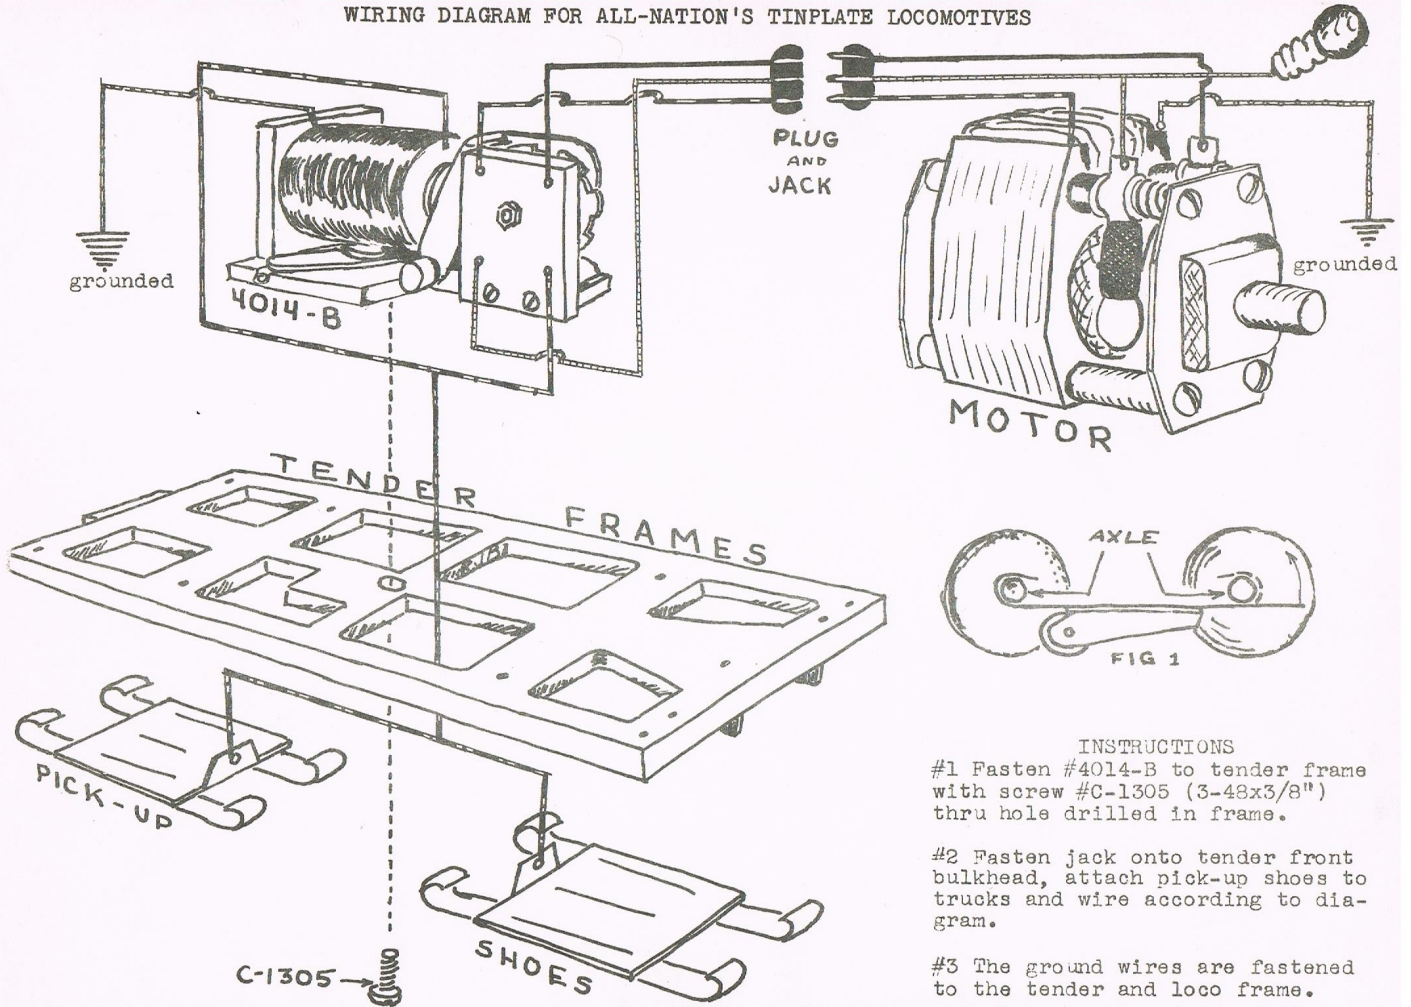

INSTRUCTIONS

#1 Fasten #4014-B to tender frame with screw #C-1305 (3-48x3/8") thru hole drilled in frame.

#2 Fasten jack onto tender front bulkhead, attach pick-up shoes to trucks and wire according to diagram.

#3 The ground wires are fastened to the tender and loco frame.

THE ALL-NATION LINE...

Chicago Illinois